


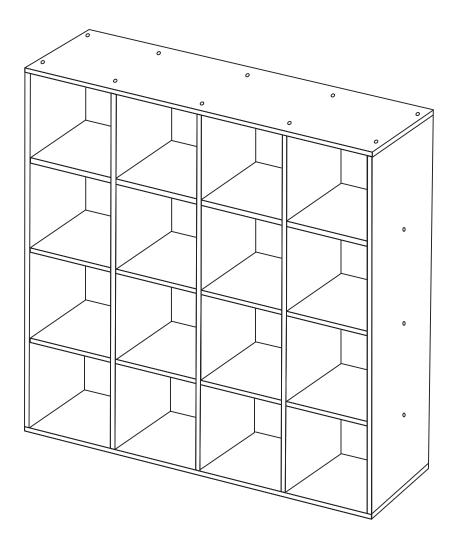

# THIS PRODUCT SHOULD BE ANCHORED TO A WALL OR OTHER SUITABLE SURFACE TO AVOID SERIOUS INJURY OR DEATH.

To help avoid any serious injury or death, this product includes a bracket to prevent toppling. We strongly recommend that this product be permanently fixed to the wall or other suitable surface. Fixing hardware is not included since different surface materials require different attachments. Please seek professional advice if you are in doubt as to which fixing hardware to use.

Regularly check your fixing device.



# A WARNING

# Children have died from furniture tipover.


- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture






# ELEMENT

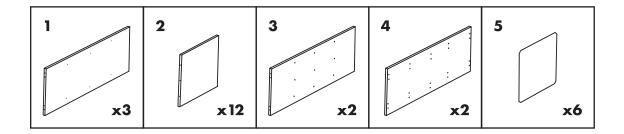


## **HARDWARE**

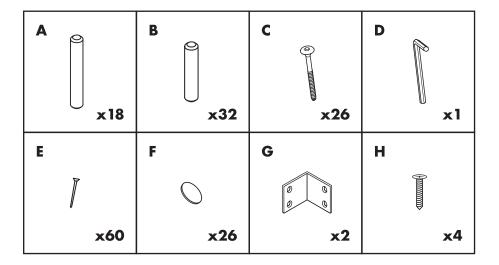





#### STEP 1

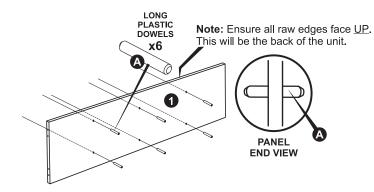


## STEP 2

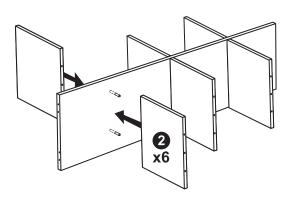

#### STEP 3

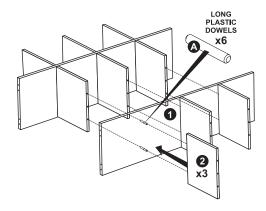


#### STEP 4

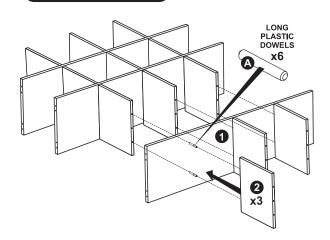





# STEP 5

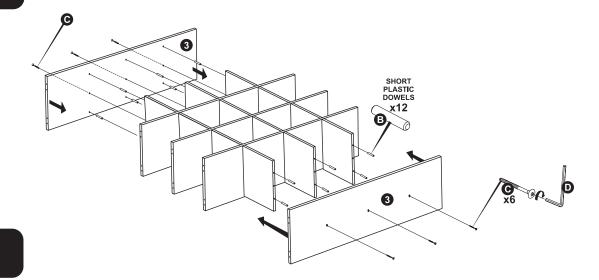

## STEP 6

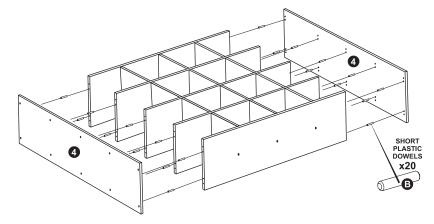


## STEP 7

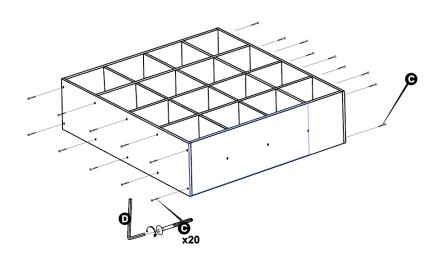




#### STEP 8

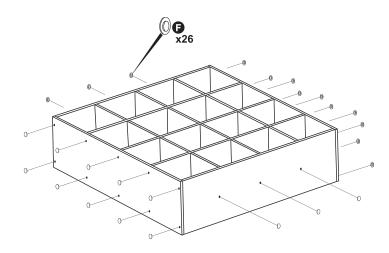


#### STEP 9

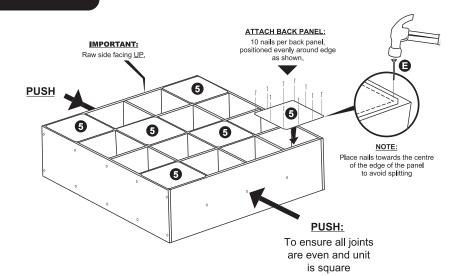


WARNING: TO AVOID THE RISK OF STORAGE TIPPING OVER, PLEASE ATTACH WALL MOUNT SUPPLIED TO THE PRODUCT AND WALL AS SHOWN.

 
are not included. For advice on suitable screw system, contact your local dealer.



**DISTRIBUTED BY:** 

Visy Retail Services Pty Ltd (AU): 1300 734 714 Visy Board Limited (NZ): 0800 443 058

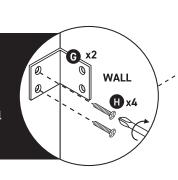

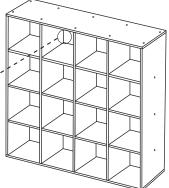

For more information please visit:

flexistorage.com.au flexistorage.co.nz