


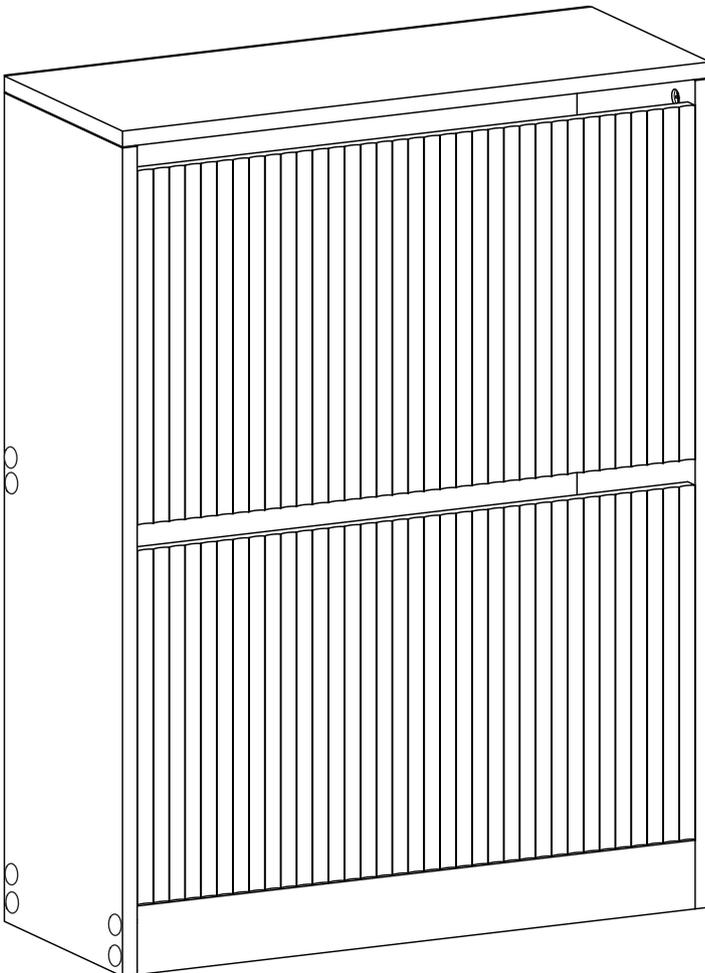


**THIS PRODUCT SHOULD BE PERMANENTLY ANCHORED TO THE WALL OR OTHER  
SUITABLE SURFACE TO AVOID SERIOUS INJURY OR DEATH.**

To help avoid any serious injury or death, this product includes a bracket to prevent toppling. We strongly recommend that this product be permanently fixed to the wall or other suitable surface. Different surface materials require different attachments. Please seek professional advice if you are in doubt what fixing hardware to use. Regularly check your fixing device.



**⚠ WARNING**

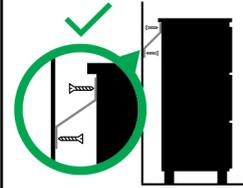

**Children have died from  
furniture tipover.**



- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

**NEVER put a TV  
on this furniture**




**CARE INSTRUCTIONS:** We recommend to wipe over with a dry micro-fibre cloth to remove any dust. Avoid using a damp or wet cloth and any cleaning chemicals as this may cause damage to the surface.


**PARTS LIST**

  M5x35mm  Ax4	 Bx4	M4x30mm  Cx12	M4x11.5mm  Dx24	M3x14mm  Ex9	 Fx12	 Gx4
 Hx4	 Ix2	 Jx2	 Kx1	 Lx4	M4x10mm  Mx12	 Nx12


**ELEMENTS**

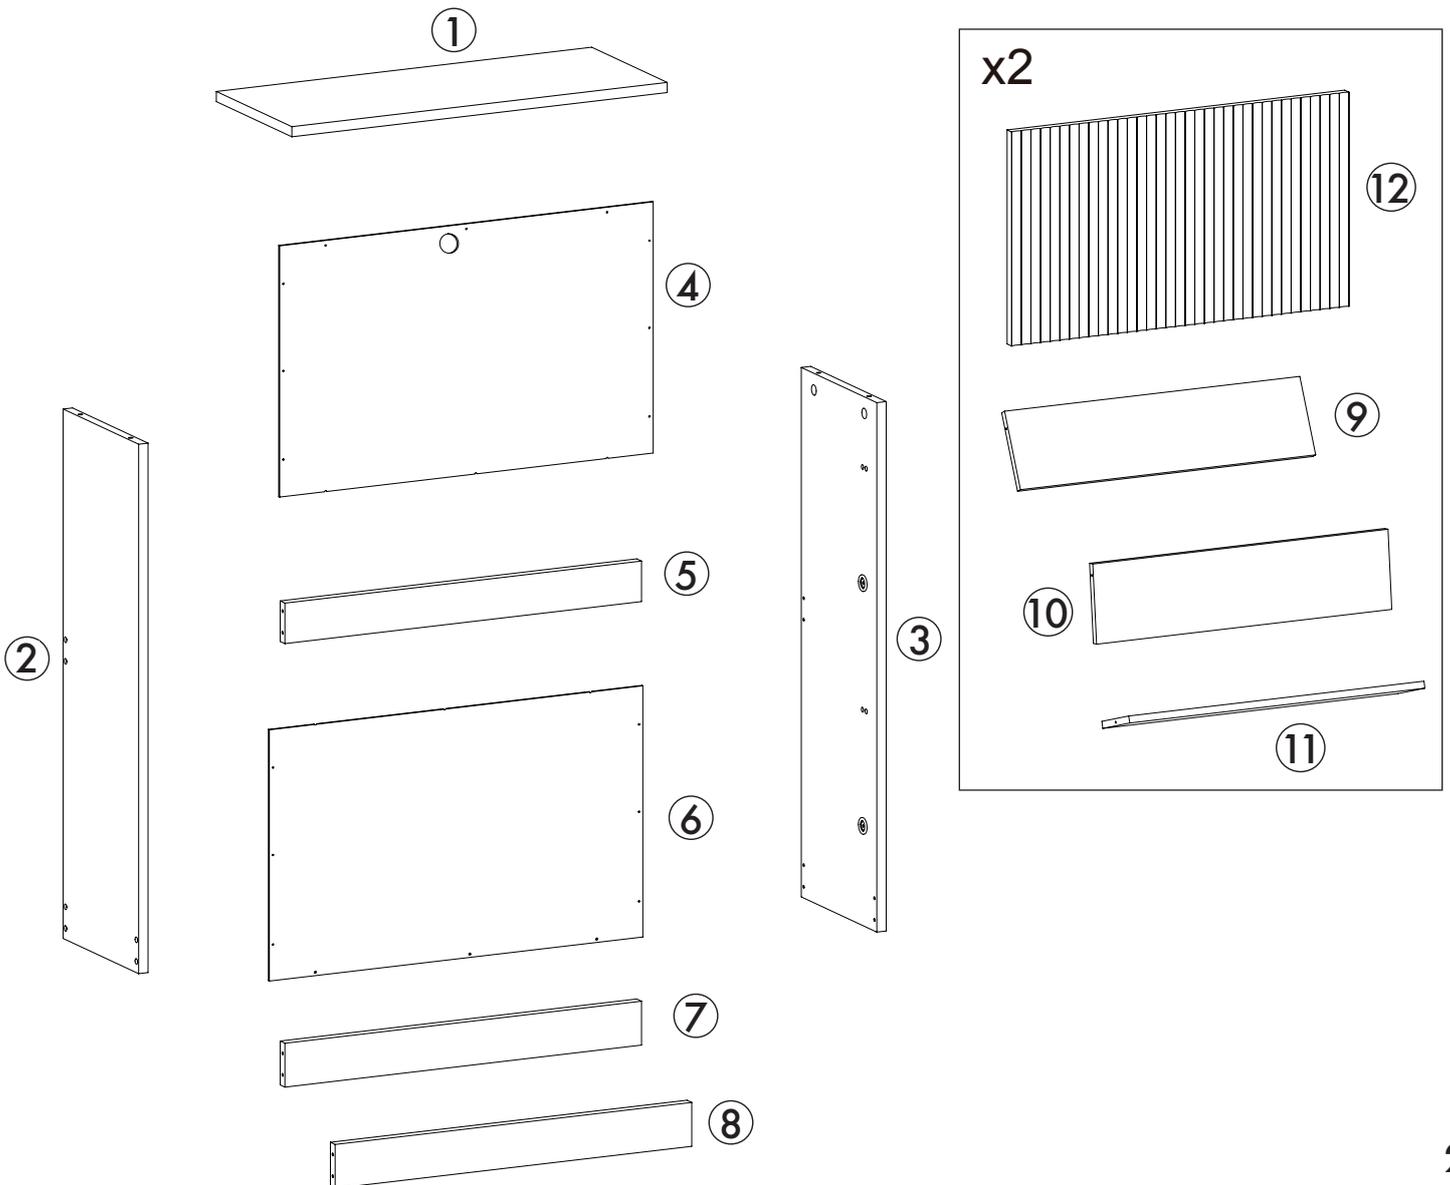


**STEP 1**

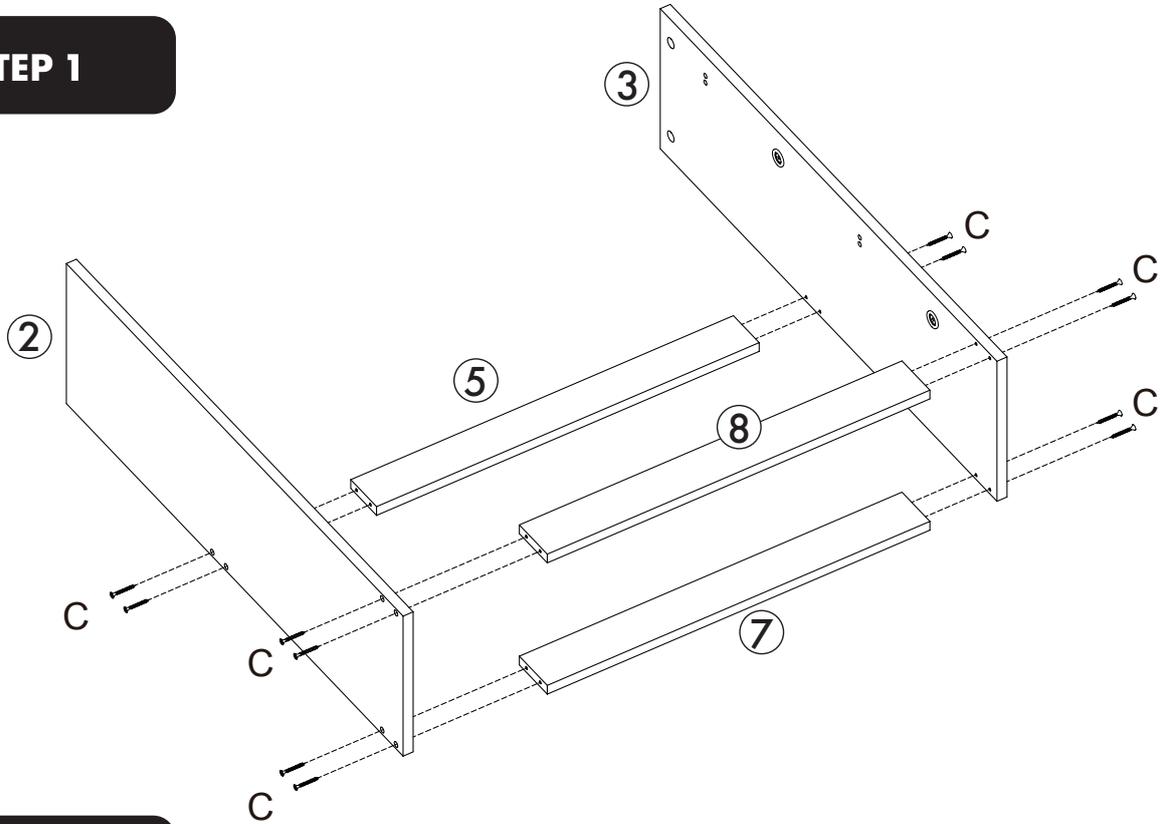

**STEP 2**

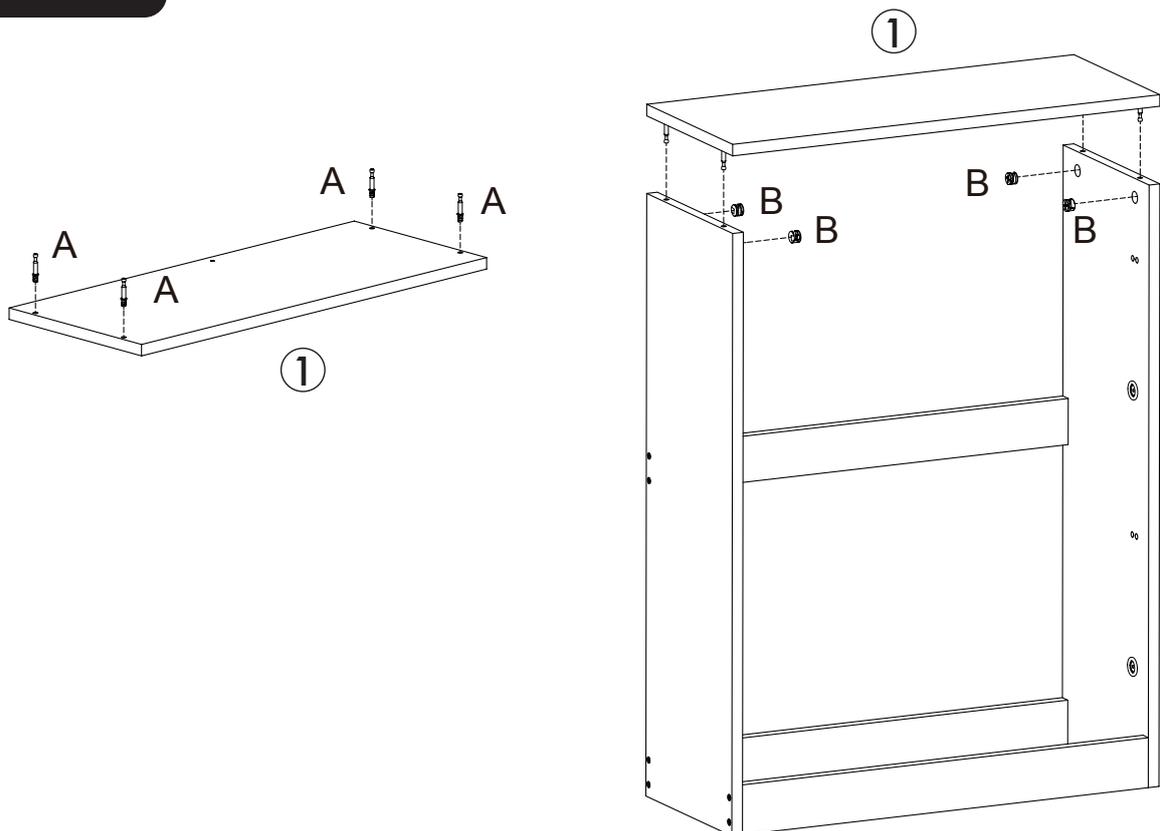


**STEP 3**

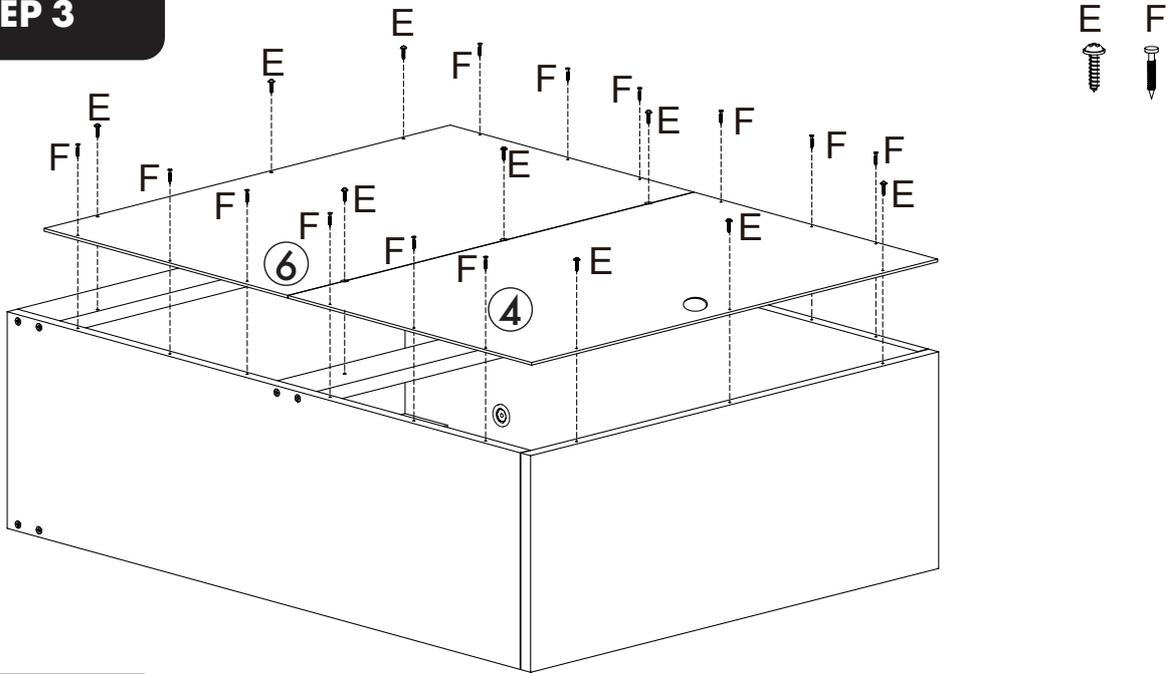


**STEP 4**

x2

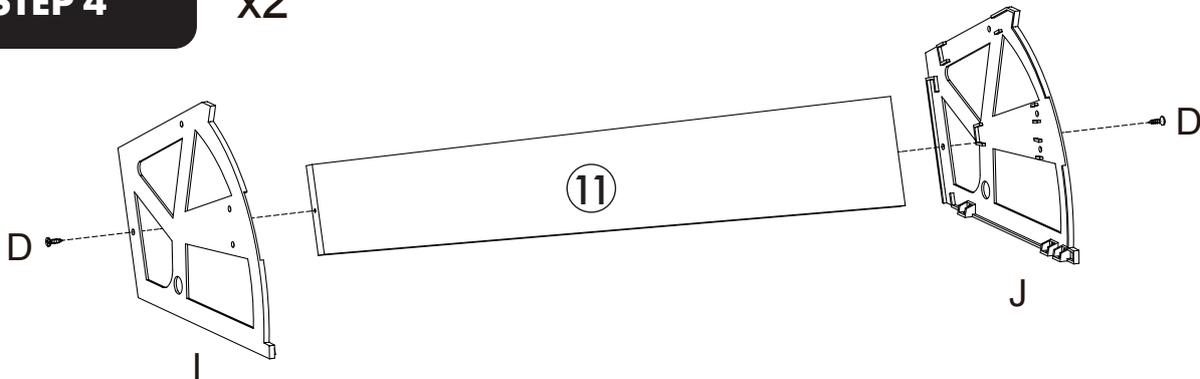


**STEP 5**


x2

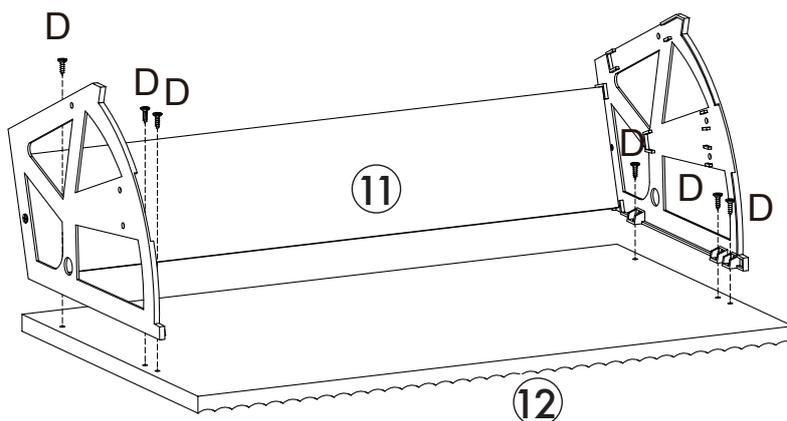


**STEP 6**

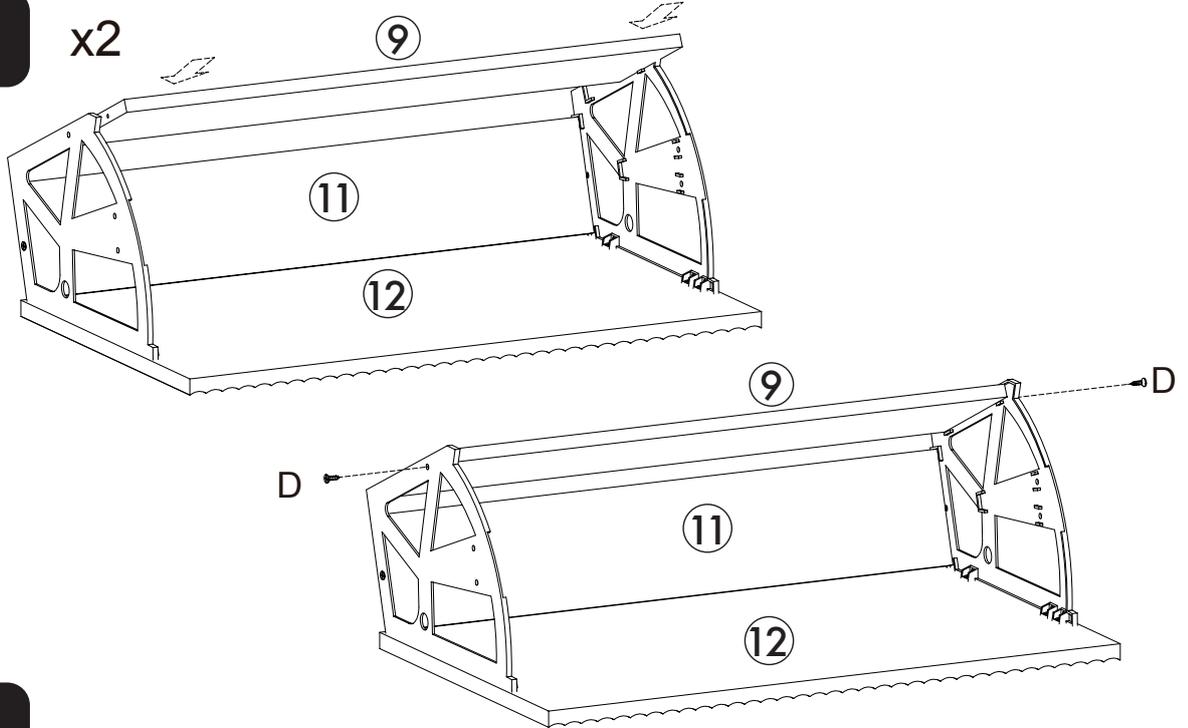



**STEP 7**

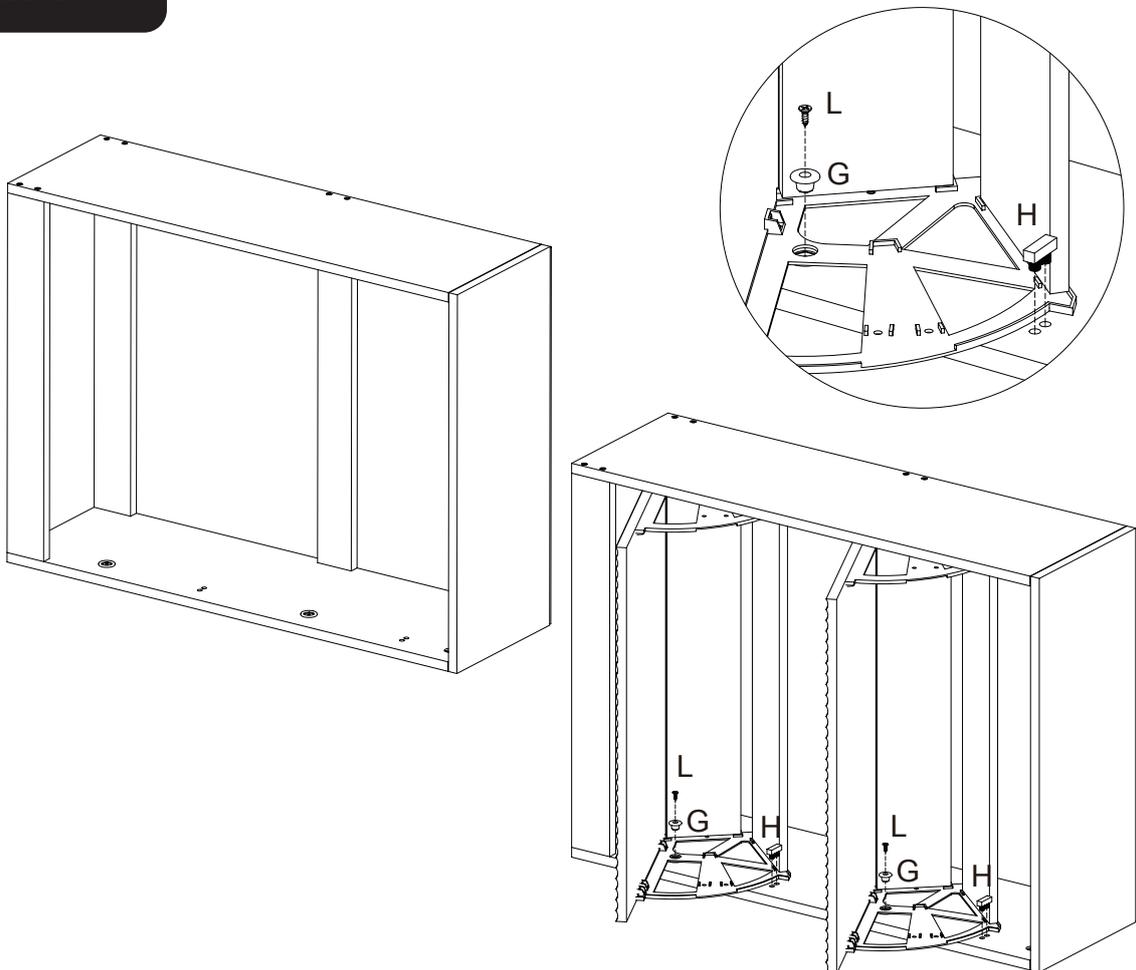

**STEP 8**


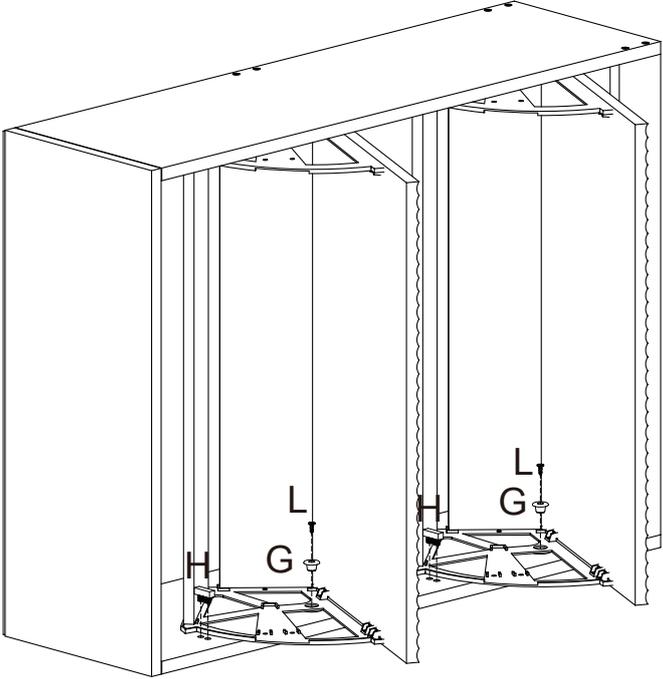


**STEP 9**

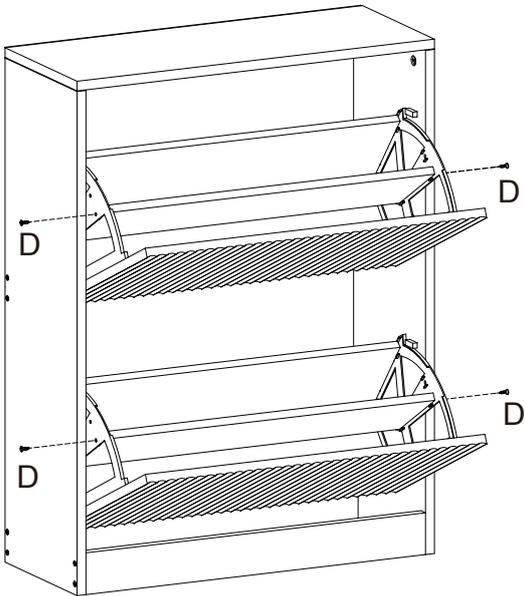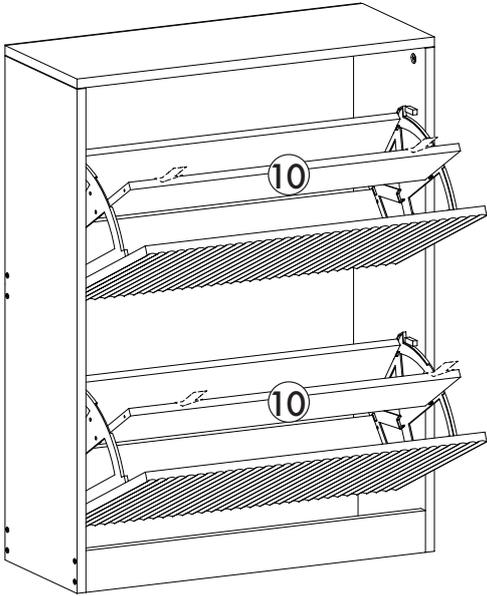


Option 1


Option 2

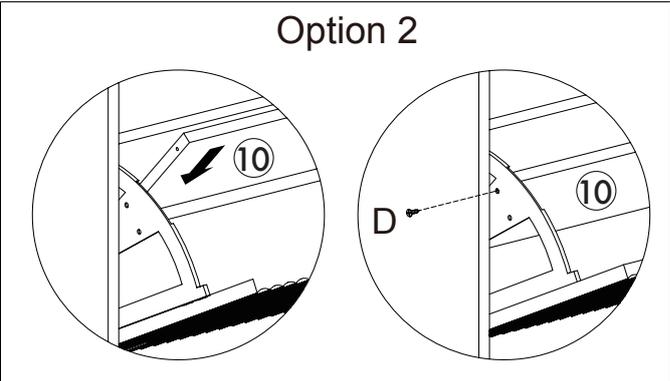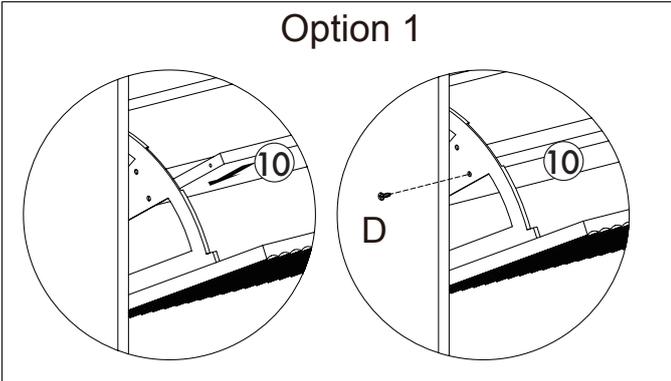

**STEP 10**

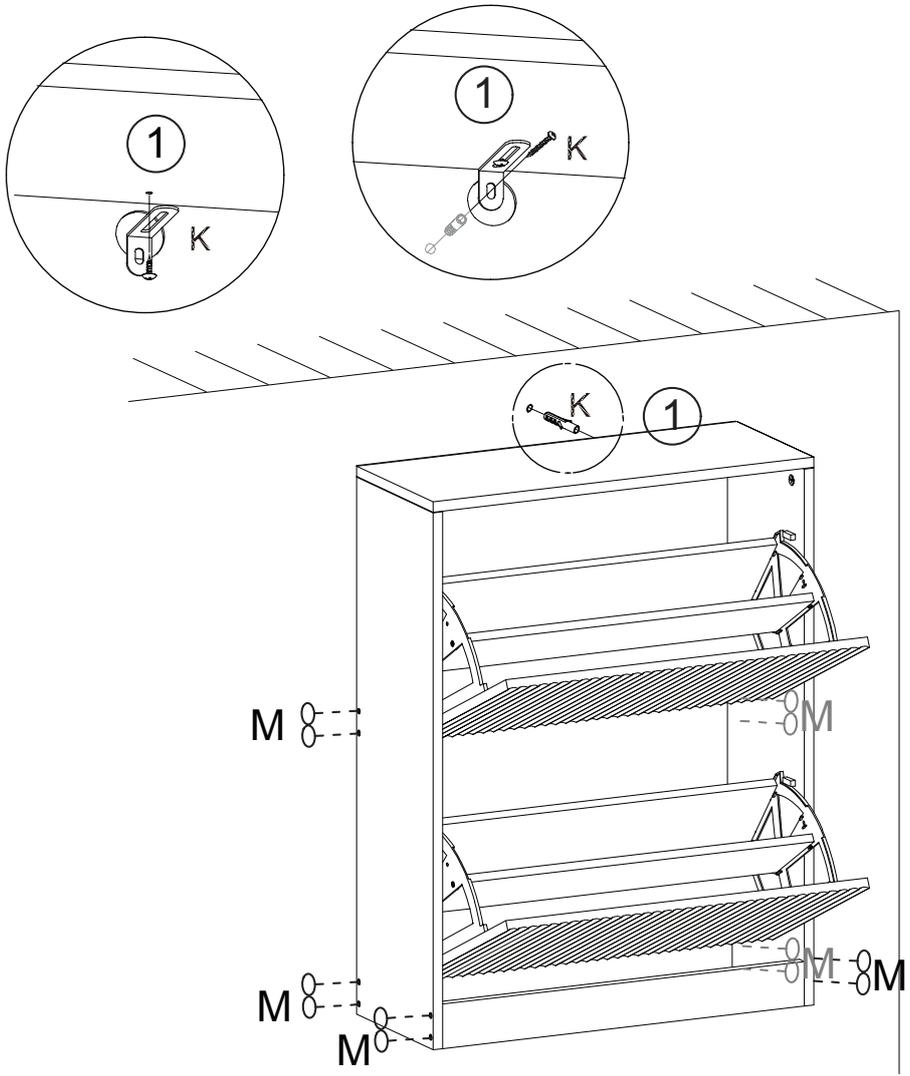

**STEP 11**

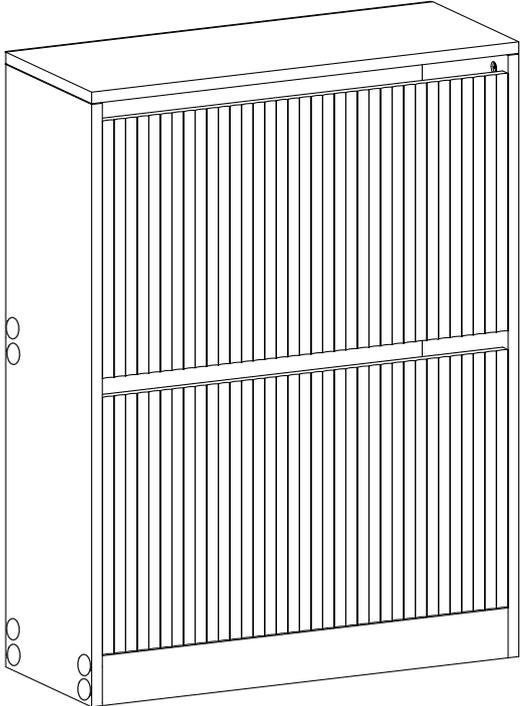

**flexistorage.com.au**  
**flexistorage.co.nz**  
 MADE IN CHINA  
 Distributed by:  
 Visy Retail Services Pty Ltd (AU): 1300 734 714  
 Visy Board Limited (NZ): 0800 443 058