


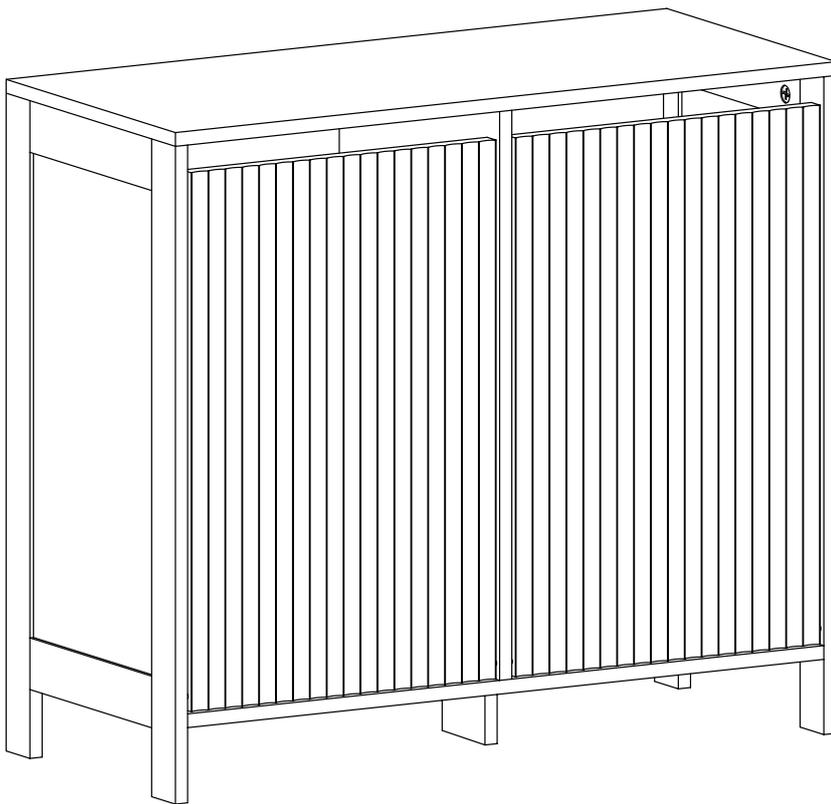


**THIS PRODUCT SHOULD BE PERMANENTLY ANCHORED TO THE WALL OR OTHER
 SUITABLE SURFACE TO AVOID SERIOUS INJURY OR DEATH.**

To help avoid any serious injury or death, this product includes a bracket to prevent toppling. We strongly recommend that this product be permanently fixed to the wall or other suitable surface. Different surface materials require different attachments. Please seek professional advice if you are in doubt what fixing hardware to use. Regularly check your fixing device.



⚠ WARNING

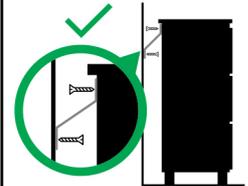

**Children have died from
 furniture tipover.**

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

**NEVER put a TV
 on this furniture**





CARE INSTRUCTIONS: We recommend to wipe over with a dry micro-fibre cloth to remove any dust. Avoid using a damp or wet cloth and any cleaning chemicals as this may cause damage to the surface.


PARTS LIST

		M5x35mm  Ax20	 Bx20	6x30mm  Cx20	6x40mm  Dx2
M4x35mm  Ex12	 Fx2	 Gx8	 Hx4	  Ix1	
M3x14mm  Jx4	M3x10mm  Kx2	 Lx2	 Mx2	 Nx15	 Ox6


ELEMENTS

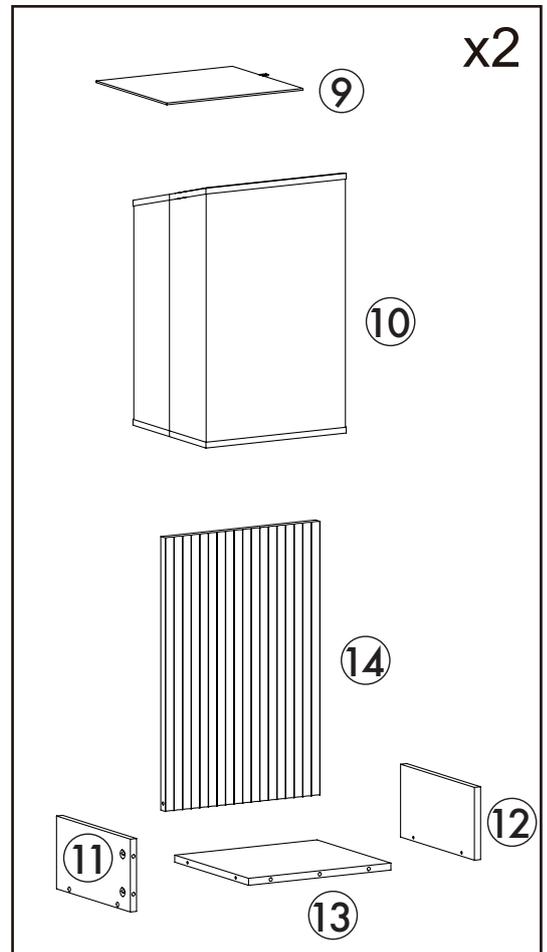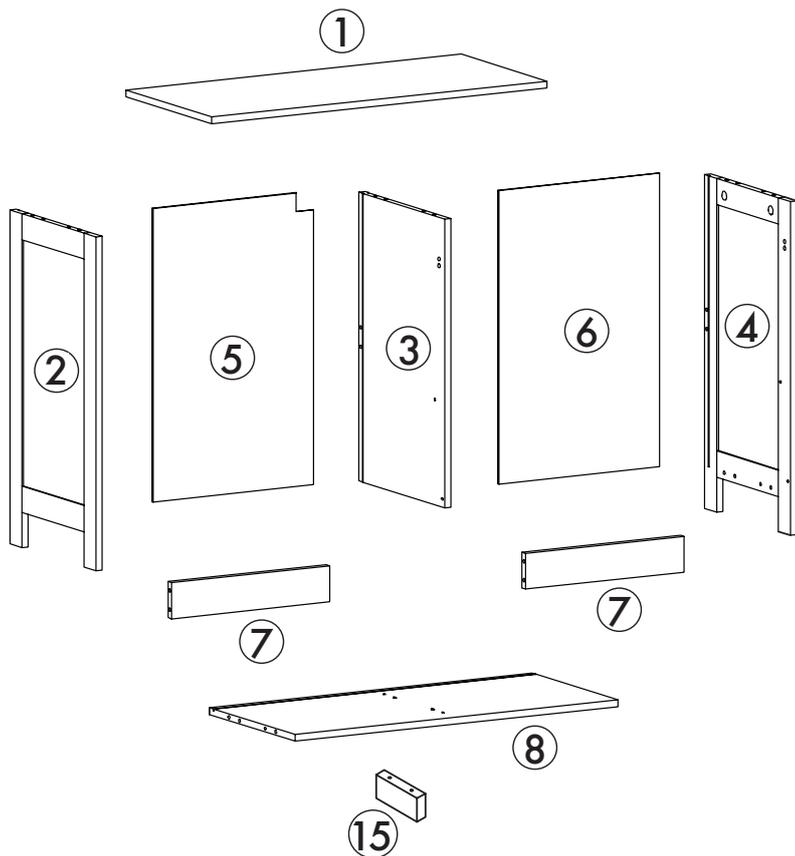

STEP 1



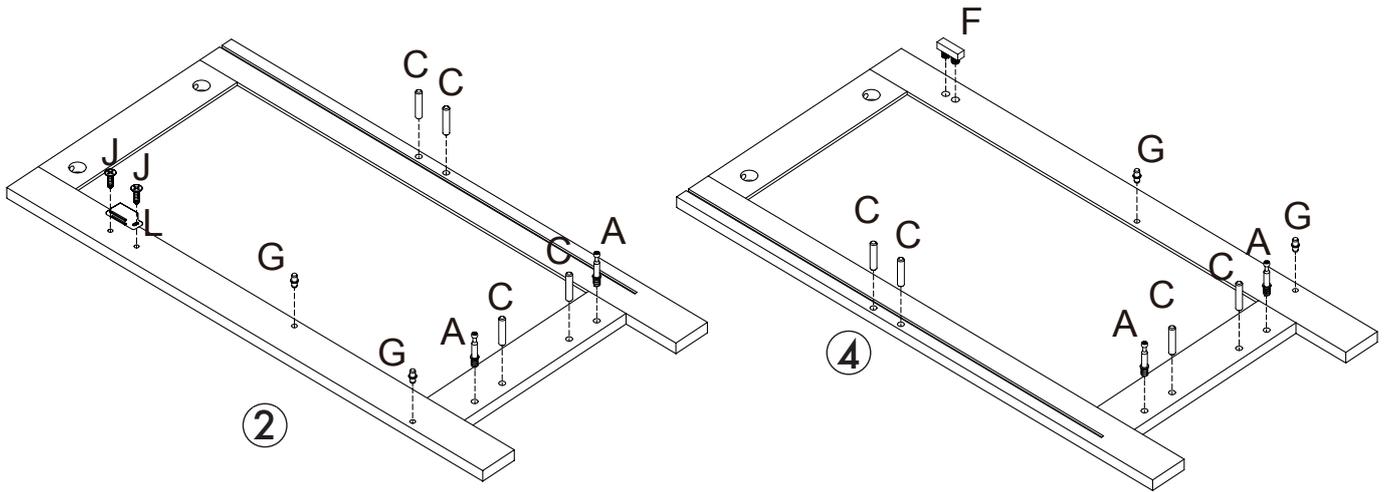


STEP 2

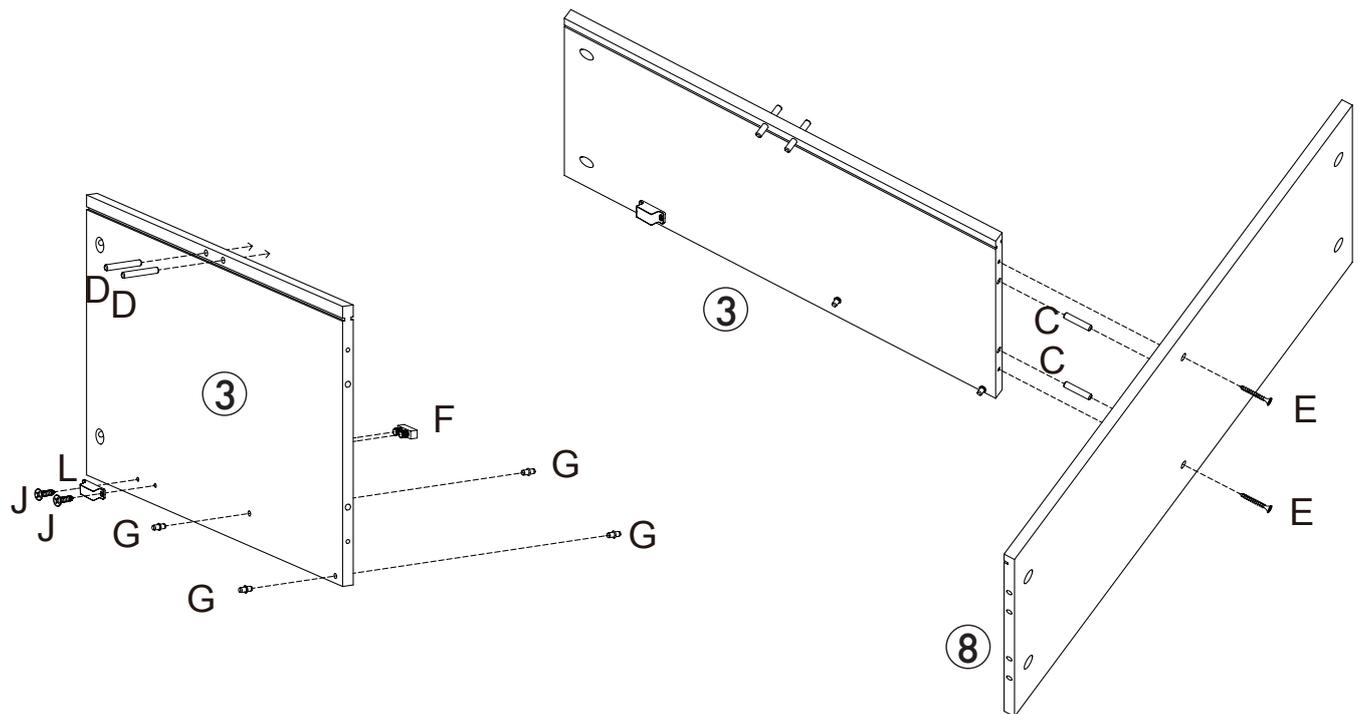


STEP 3


x2

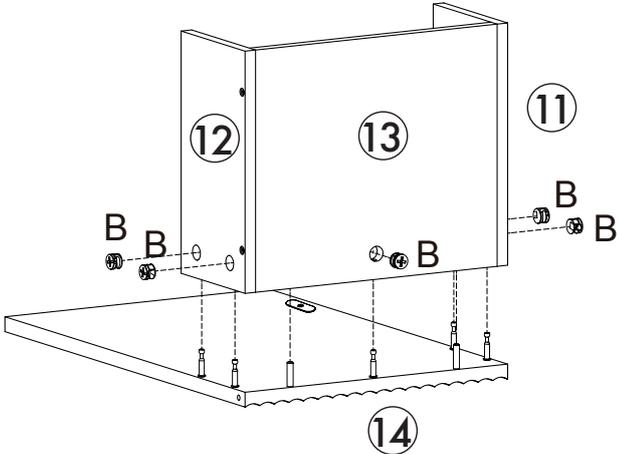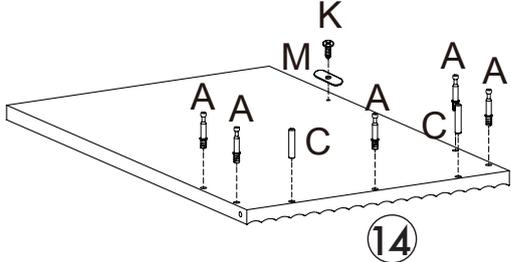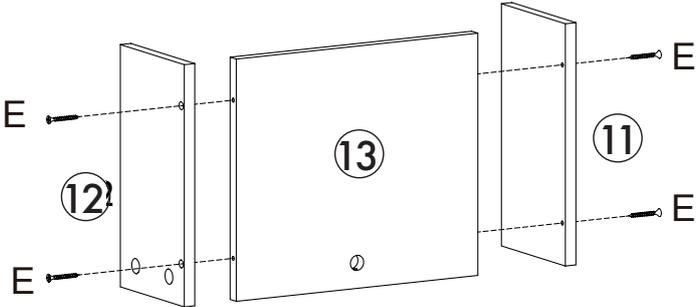


STEP 4

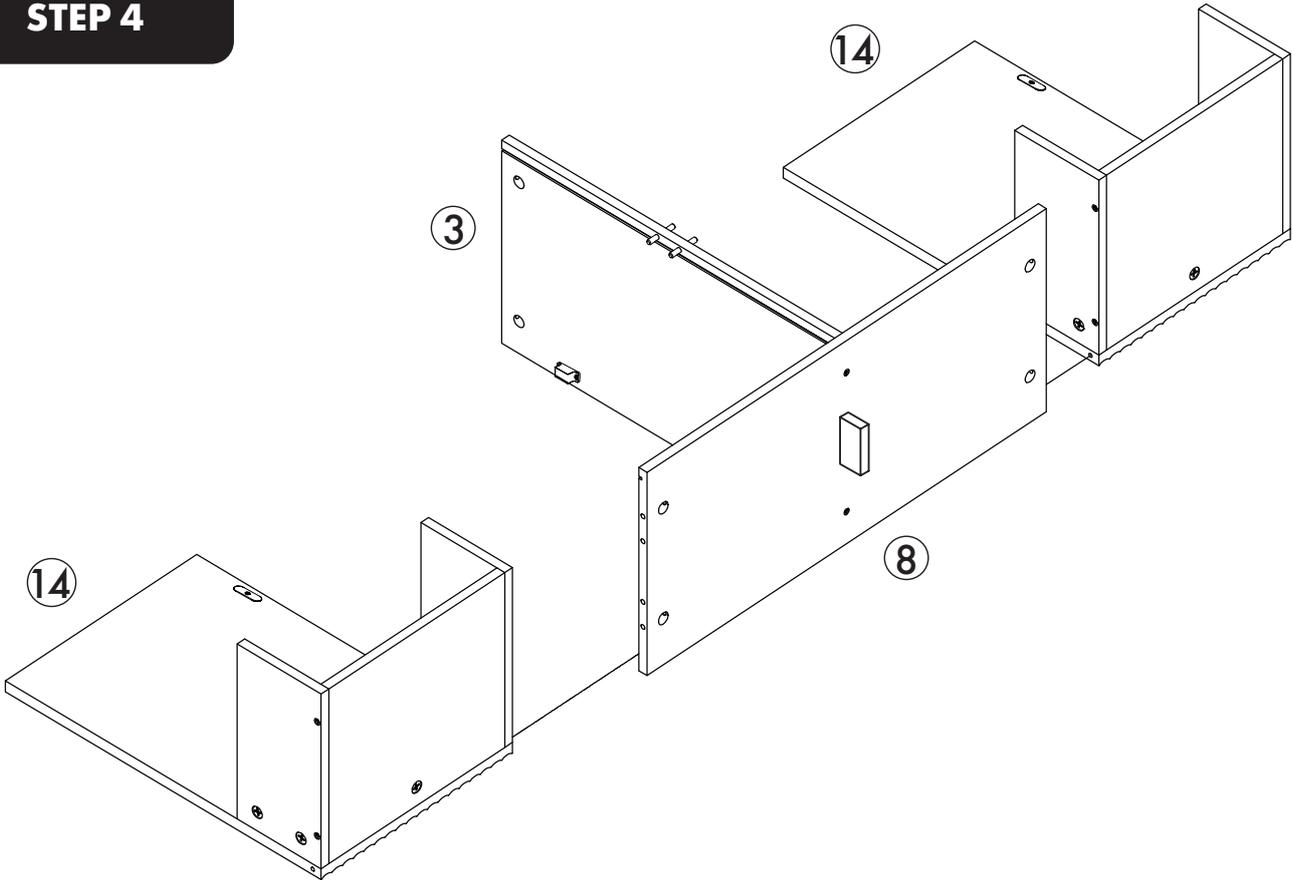



STEP 5

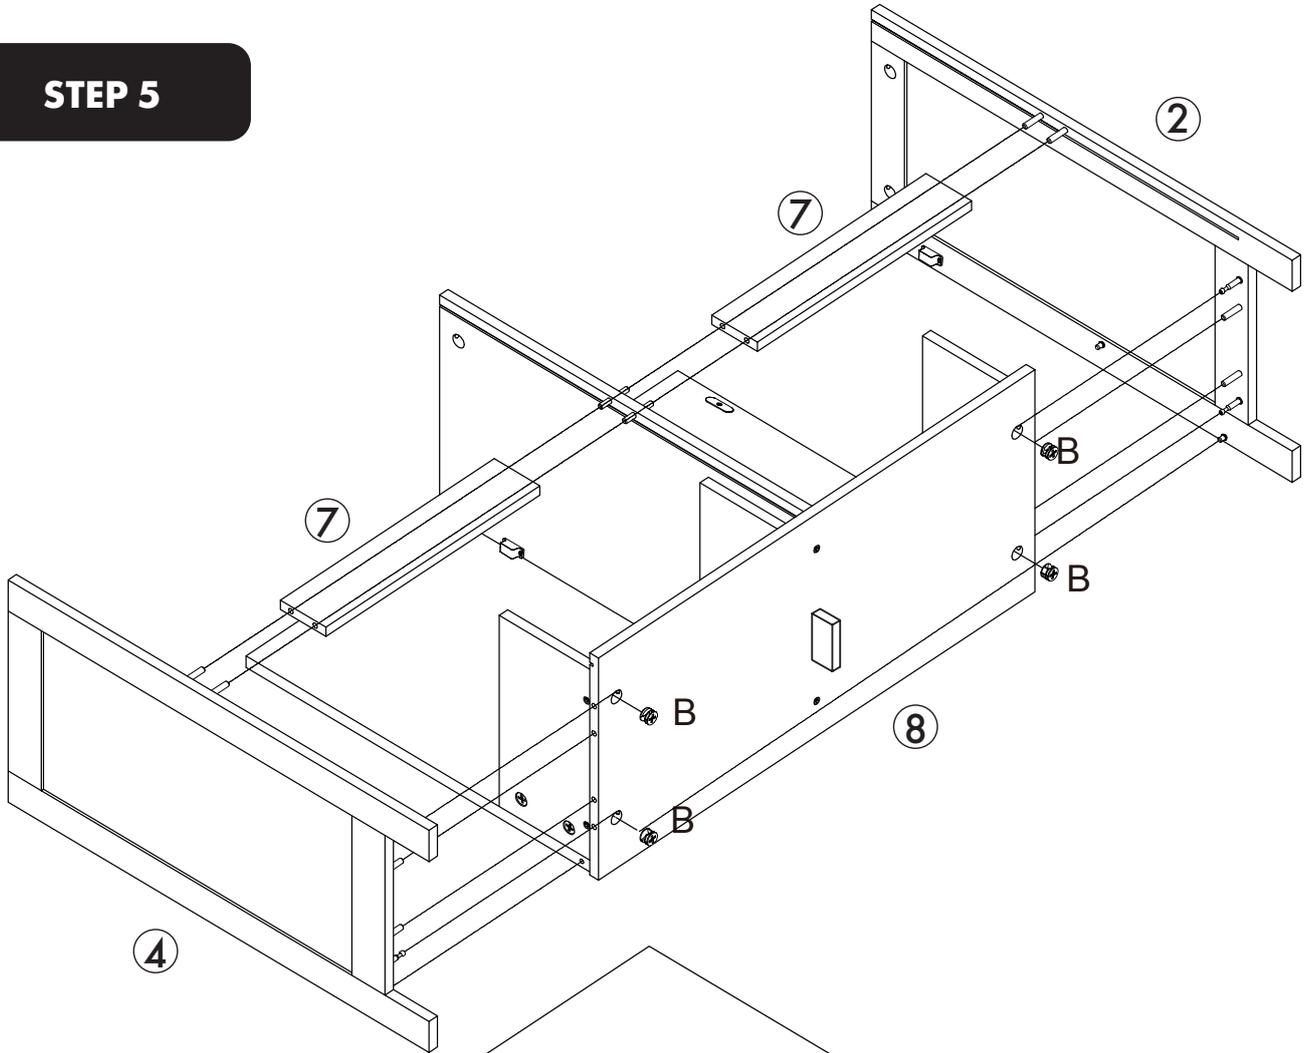


STEP 6

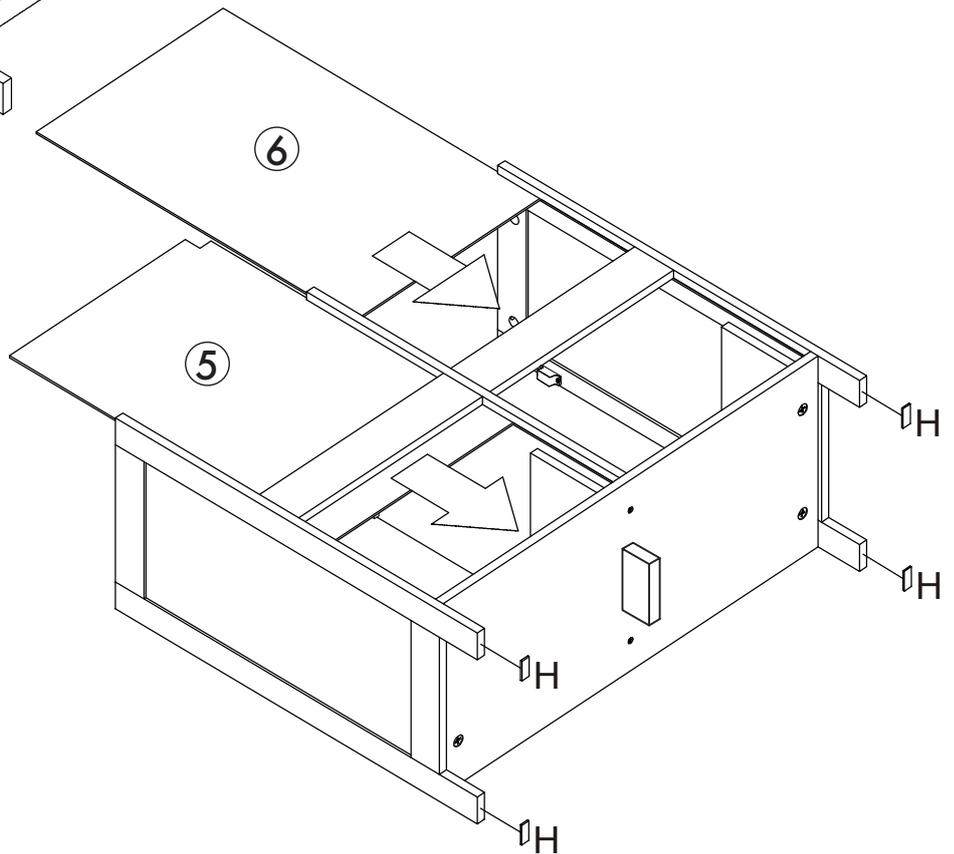


STEP 7

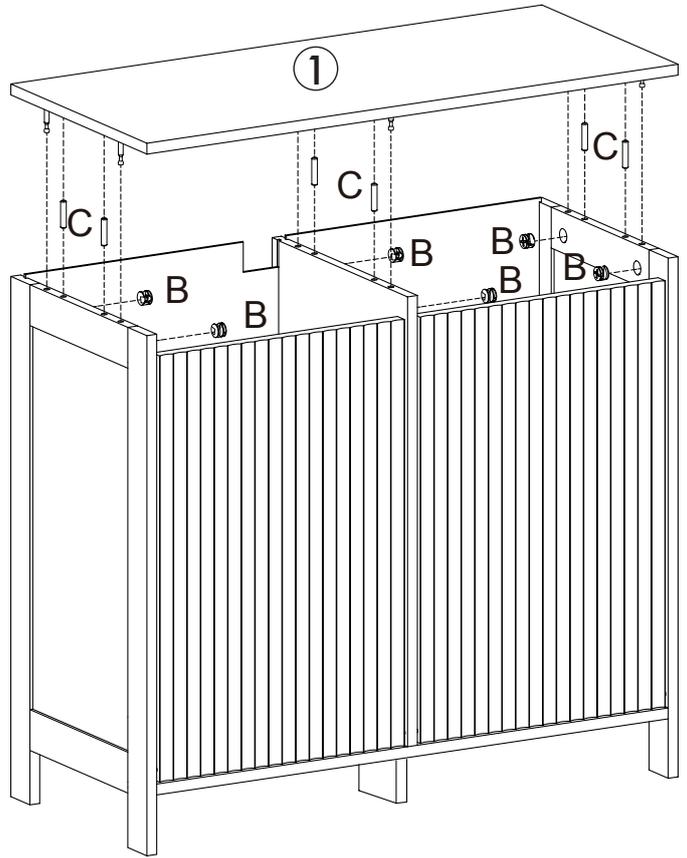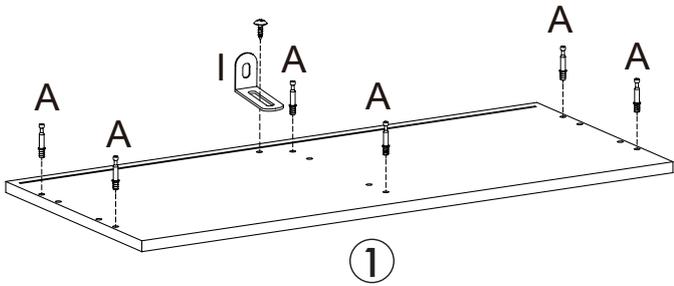


STEP 8

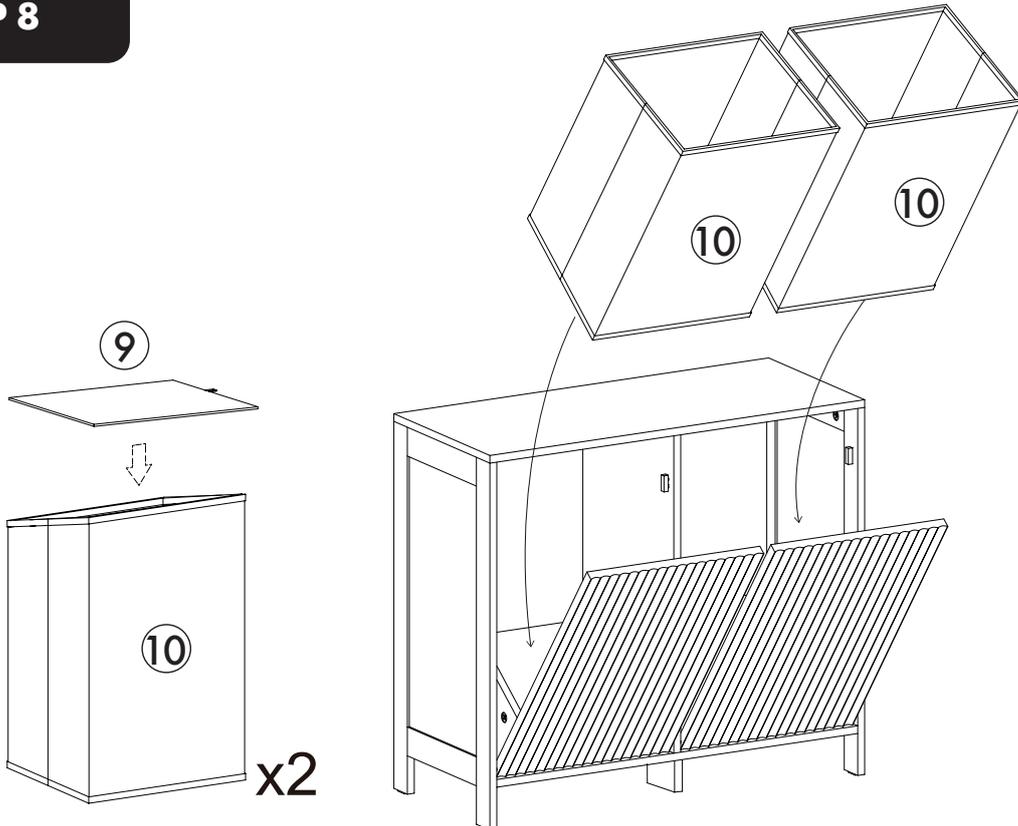


STEP 9

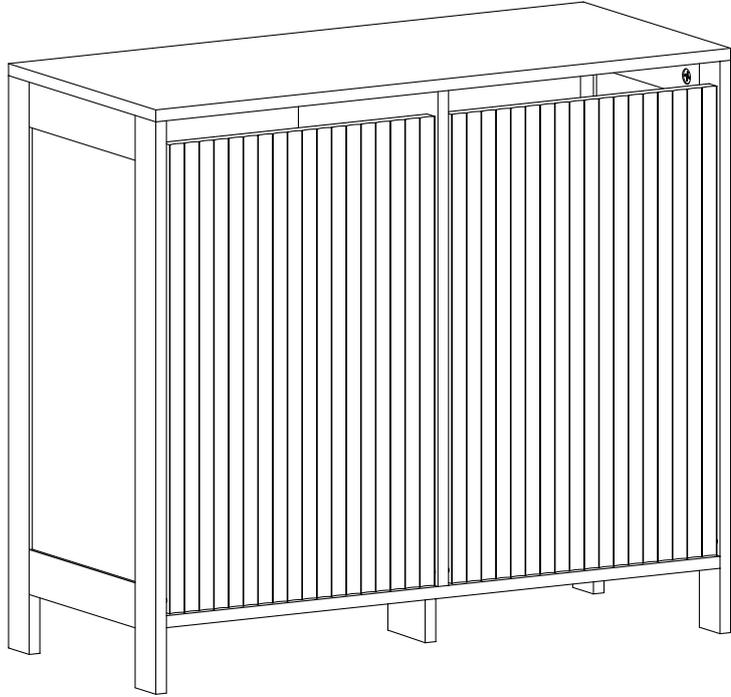


STEP 10

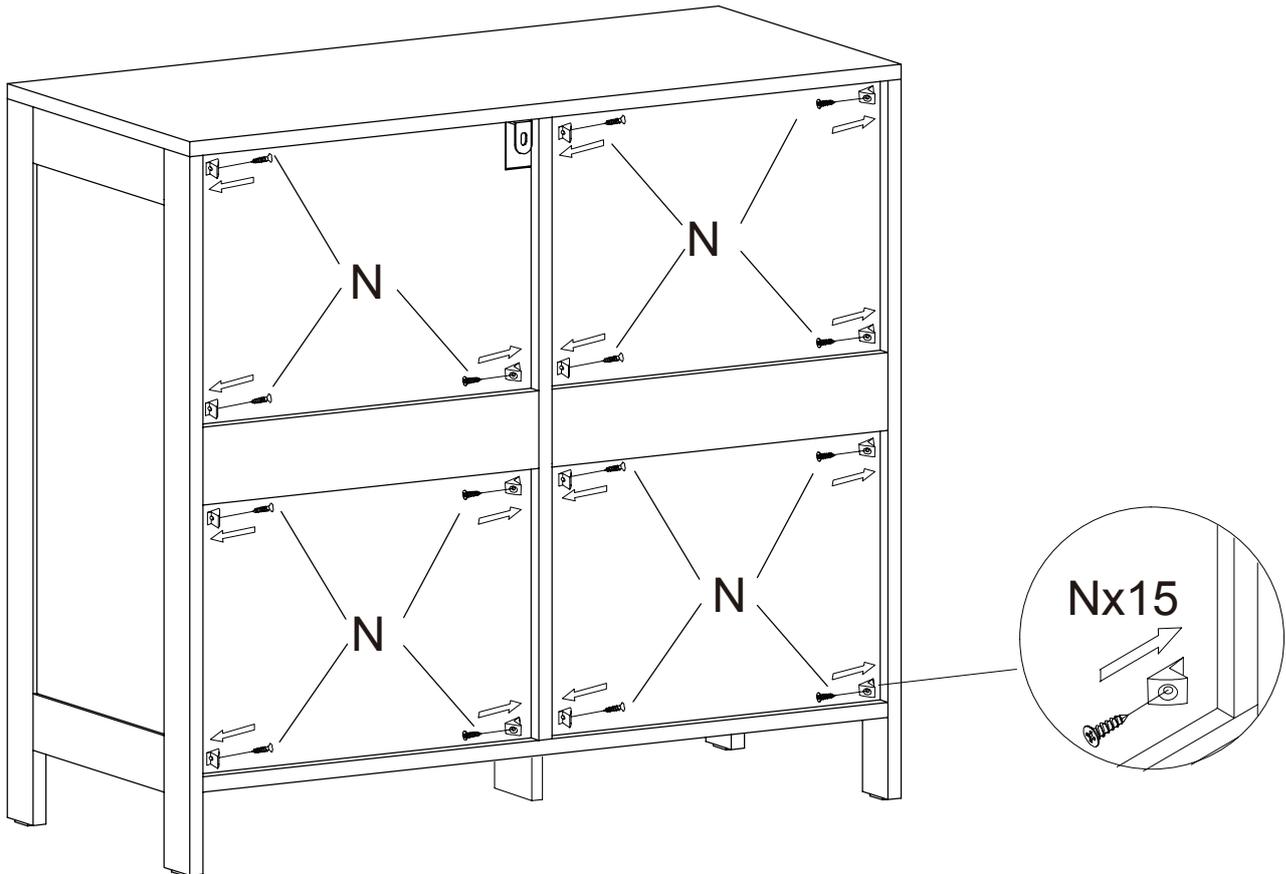

STEP 11

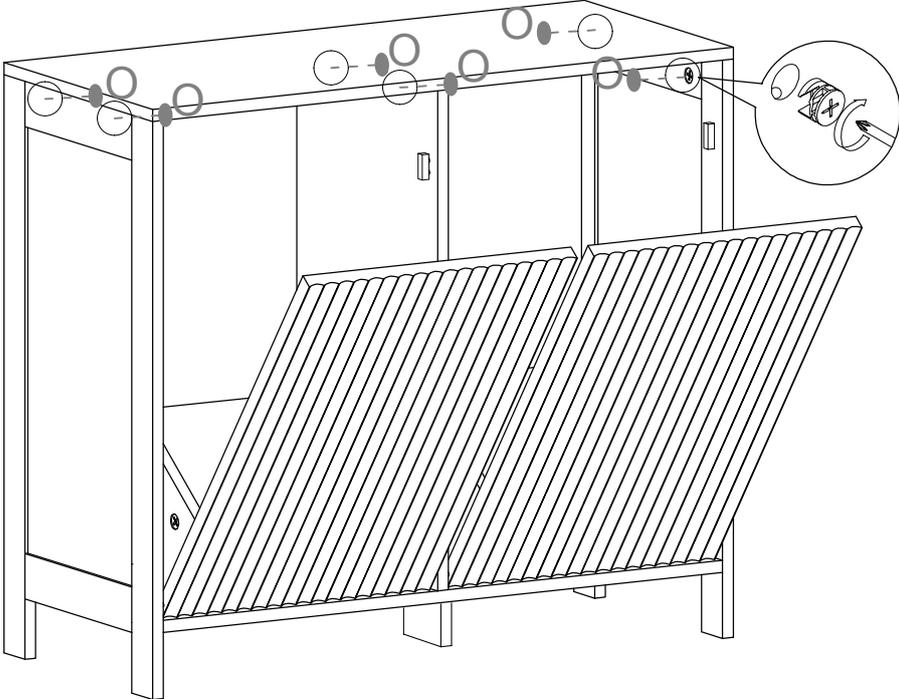

STEP 11

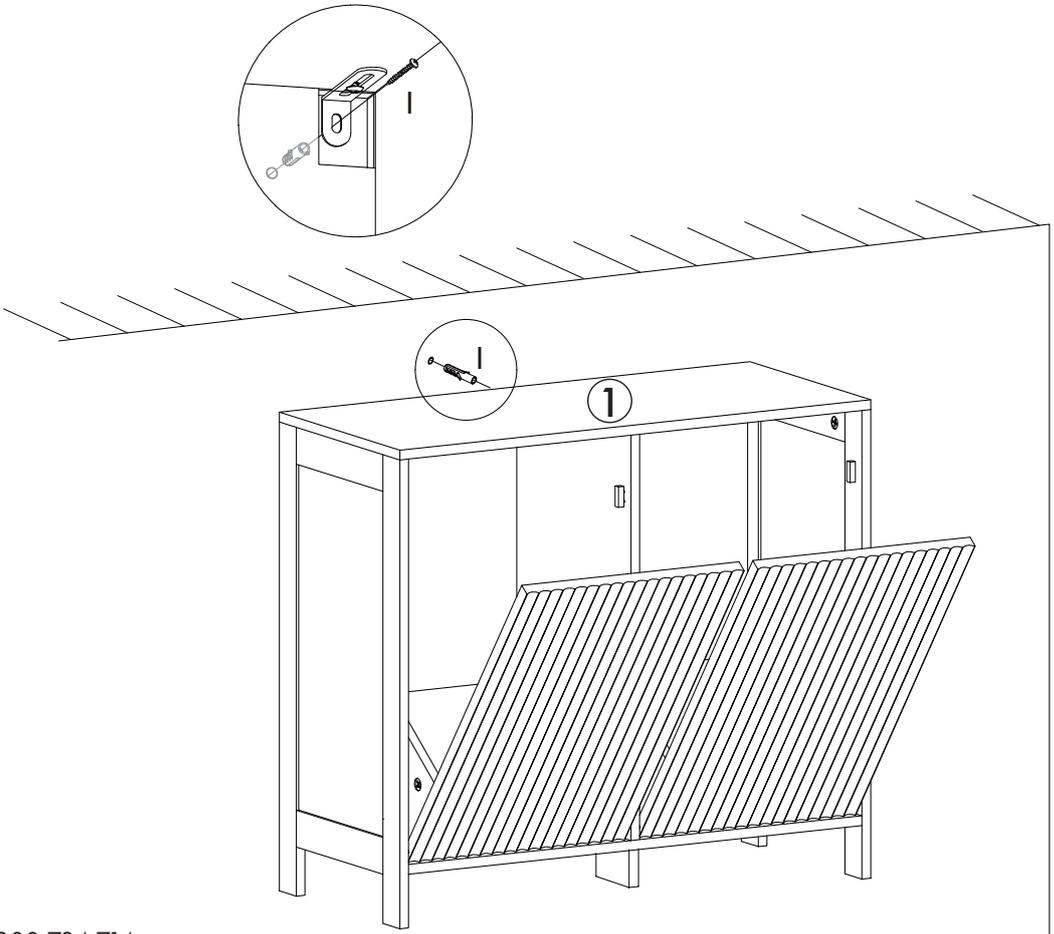

flexistorage.com.au

flexistorage.co.nz

MADE IN CHINA

Distributed by:

Visy Retail Services Pty Ltd (AU): 1300 734 714

Visy Board Limited (NZ): 0800 443 058